

note: Requires Pharos LPC, LPC X or TPC to operate

- Consult the **Installation Guide** for technical details
- See **General Notes.pdf** for information on cabling types
- Contact your supplier, visit our website or mail support with any other questions

